

## 220P-15,20 & 25

The valve is fitted with a grey, high pressure seat for water supplies up to 1400 kPa, (200 psi). The seat may be removed for increased flow at pressures below 500 kPa, (70 psi).

WARNING If the inlet pressure exceeds 500 kPa and the seat is removed, the valve will not shut off.

## To remove seat:

- (1) Remove the split pin, arm, and plunger from the body
- (2) Push the larger, grey sleeve tool firmly into the inlet and hold in place
- (3) Push the smaller, plunger tool into the large sleeve tool to push out the seat.

N.B. The plunger tool may be used to re-insert the seat from the arm end of the valve if necessary.

