
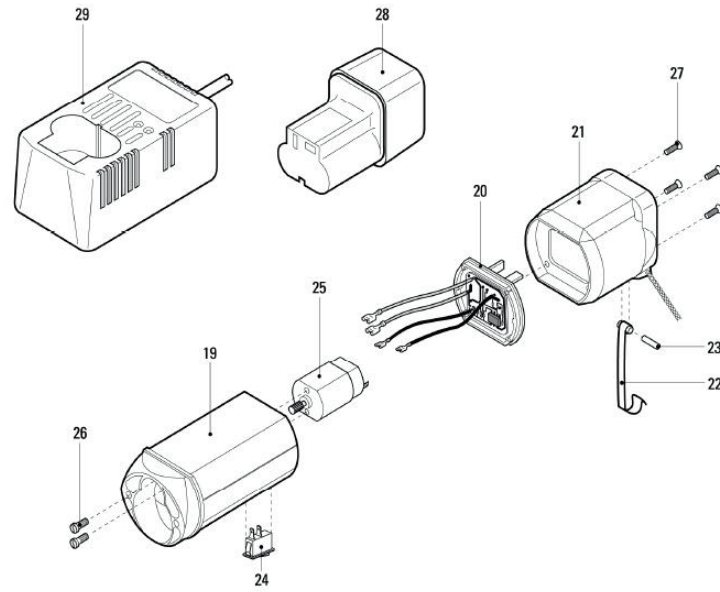


Heiniger Cordless

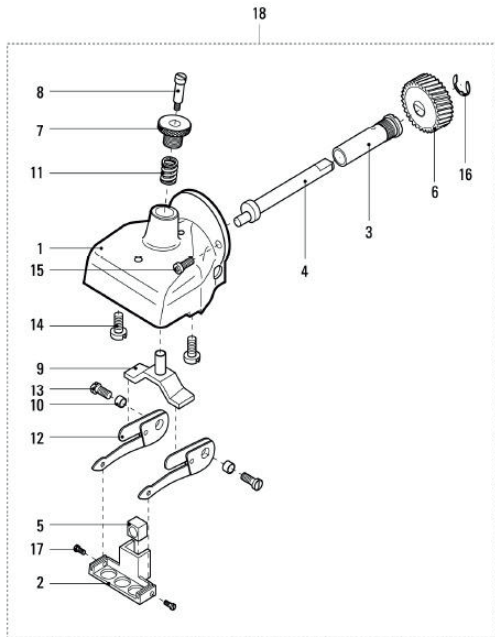

Position	Artnr.	Lev. Artnr	Benämning
1	HE-433	706-501	Tomhus Nötsax
2	HE-419	706-503	Skärhållare
3	HE-420	706-505	Excenterhylsa
4	HE-421	706-506	Excenteraxel
5	HE-435	706-507	Fyrkantlager Heiniger
6	HE-750	701-710	Kuggjul (Cordless)
7	HE-423	706-509	Justermutter
8	HE-424	706-510	Distansskruv
9	HE-425	706-511	Ok
10	HE-426	706-514	Distansbussning
11	HE-427	706-517	Justerfjäder
12	HE-428	706-518	Vibratorfjäder
13	HE-429	706-520	Skruv till vibratorfjäder
14	HE-430	706-521	Skärskruv
15	HE-240	707-094	Skruv
16	HE-418	706-524	Låsbricka
17	HE-432	706-525	Vibratorskruv
18	HE-751	701-740	Komplett Huvud Cordless
19	HE-752	701-701	Motorhölje Cordless
20	HE-753	701-702	Kretskort Med Fästplatta (Cordless)
21	HE-754	701-700-20 A	Batteri infästingshölje Cordless
22	HE-755	701-704	Fjäder med sprint till Batteri (Cordless)
23	HE-756	701-705	Sprint till Batterifjäder (Cordless)
24	HE-757	701-700-22	Strömbrytare (Cordless)
25	HE-758	701-700-21	Elmotor (Cordless)
26	HE-759	701-711	Skruv till Elmotor
27	HE-760	701-712	Skruv till Batteri infästingshölje
28	HE-761	701-715	Batteri 7.2V / 2Ah
29	HE-762	701-700-10 A	Laddare cordless

LG Produkter AB
Bjärarydsvägen 400
294 93 Sölvesborg

Tel: 0456-820020
E-mail: order@lgprodukter.se
Internet: www.lgprodukter.se

